



INSTALLATION INSTRUCTIONS

FOR

6799-720 COOL ONLY

6799-725 HEAT/COOL

6799-726 HEAT/COOL

REMOTE CONTROL

CEILING ASSEMBLIES

TABLE OF CONTENTS

Section I.	General Information	2
Section II.	Application	3
Section III.	Installation Instructions	3
Section IV.	Operation	4
Section V.	Maintenance and Warranty	4

This booklet is intended as a general information guide for installing the remote control ceiling assembly. For specific wiring and unit information, refer to the Data Sheet published for your series air conditioner.

IMPORTANT NOTICE

These instructions are intended for use by qualified technicians specially trained and experienced in the installation of this type of equipment and related system components.

Installation and service personnel are required by some states to be licensed. PERSONS NOT QUALIFIED SHALL NOT INSTALL NOR SERVICE THIS EQUIPMENT.

WARNING

Improper installation may damage equipment, can create a hazard and will void the warranty.

The use of components not tested in combination with these units will void the warranty, may make the equipment in violation of state codes, may create a hazard and ruin the equipment.

WARNING — SHOCK HAZARD

To prevent the possibility of severe personal injury or equipment damage due to electrical shock, always be sure the electrical power source to the appliance is disconnected during installation or service.

CAREFULLY FOLLOW ALL INSTRUCTIONS AND WARNINGS IN THIS BOOKLET TO AVOID DAMAGE TO THE EQUIPMENT, PERSONAL INJURY OR FIRE.

NOTE

The words “Shall” or “Must” indicate a requirement which is essential to satisfactory and safe product performance.

The words “Should” or “May” indicate a recommendation or advice which is not essential and not required but may be useful or helpful.


SECTION I. — GENERAL INFORMATION

This ceiling assembly is specifically designed to allow the consumer to operate the RV Products roof top air conditioning system from a 12 VDC wall mounted thermostat. All manual controls have been removed from the ceiling plenum and have been replaced with 12 VDC control relays. All air conditioning functions are controlled by the wall mounted thermostat.

The thermostats that RV Products supplies for this system are Heat/Cool thermostats. The cool function of the thermostat will operate the 12 VDC relays in the ceiling plenum, thus operating the air conditioning system. Operational characteristics are explained in Section IV.

When using a heat/cool ceiling assembly, a 7330-3401 thermostat sub-base may be installed to select between upper unit electric heat or on board furnace heat. If the sub-base is not used, then a separate heating thermostat must be supplied to operate the furnace. An interlock switch must be installed between the heat/cool thermostat and the heating thermostat to prevent simultaneous furnace and air conditioner

operation. See diagram below.

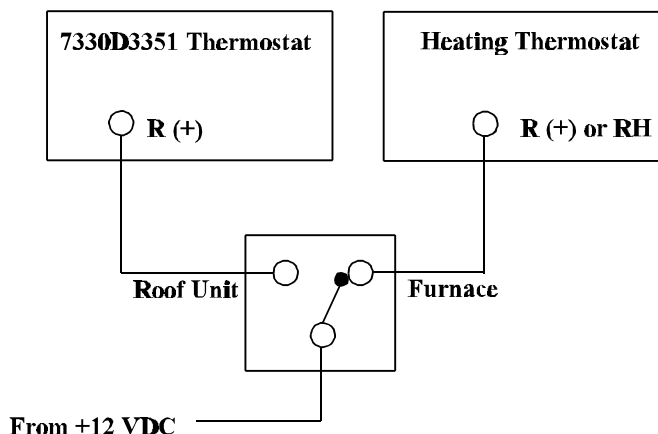

SECTION II. — APPLICATION

This ceiling plenum was designed to operate any 6700 Series roof top unit with a 7330D3351 thermostat.

There are separate installation instructions for mounting the roof top unit and the thermostat package. These instructions are supplied with the product and must be followed when installing that product.

IMPORTANT

The wall mount thermostat system requires thermostat wiring to communicate between the thermostat and the ceiling assembly of the air conditioner. Allowances must be made for this wiring before ceiling and wall panels are in place. Thermostat wiring must be routed into the air conditioner

14" x 14" opening in the same manner as the 115 VAC supply wiring.

All wiring must conform to local and national code ordinances.

Route all wiring to prevent possible contact with nails, screws or staples in order to prevent shorted circuits or open circuits caused by wire penetration.

RV Products recommends a minimum thermostat wiring size of 18 gauge.

RV Products recommends that you do not hi-pot test this system. Hi-pot testing can result in possible damage to the low voltage circuits.

SECTION III. — INSTALLATION INSTRUCTIONS

NOTE

Be sure all electrical power has been disconnected from both the air conditioner and thermostat before beginning these instructions.

A. Installing The Roof Top Unit and the Ceiling Plenum —

Mount the roof top unit and ceiling plenum per the instructions provided with the roof top unit air conditioner. When routing the 115 VAC wiring, give consideration to, and also route the thermostat 12 VDC wiring into the 14" x 14" opening. When routing the supply or thermostat wiring, be sure not to pinch or cut into the wiring jacket. Allow 24" of supply wiring and thermostat wiring through the support frame. After the roof top unit and ceiling plenum have been mounted to one another, refer to these instructions for proper wiring of both the 115 VAC supply and the 12 VDC thermostat wiring.

B. High Voltage Wiring —

Route the 115 VAC supply wiring through the strain relief into the High Voltage Area allowing 4-6 inches. Strip the wiring approximately 5/8 inches. Pigtail the black to black wires, and white to white wires with the wire nuts provided. Using a U.L. approved electricians tape, secure the wire nuts to the wire. Secure the ground supply wire under the grounding screw. Tighten the strain relief clamp to secure the 115 VAC supply wire. See Figure 1, Page 4.

C. Installing The Thermostat —

Refer to the installation instructions supplied with the

thermostat for mounting the thermostat and wiring the thermostat sub-base.

D. Low Voltage Wiring —

IMPORTANT

Disconnect all electrical power to the thermostat before wiring to the ceiling plenum. Do not short relay terminals or wires to test the system. Shorting the wires will damage the thermostat.

Route the low voltage thermostat into the ceiling plenum "Low Voltage Area" through the low voltage entrance. Allow 4-6 inches of thermostat wiring inside the low voltage area and strip each end approximately 3/8 inches. See Figure 1, Page 4.

The wires already found inside the low voltage area are color

Low Voltage Wiring Chart

Ceiling Assembly Pigtail Color	Wire Function	Connect To Thermostat Terminal
Yellow	Operates Compressor	Y
Green	Operates High-Fan	GH
Gray	Operates Low-Fan	GL
Blue	Completes 12 VDC (-) Cir.	B
White*	Completes Electric Heat	W**

* On Heat/Cool Models

** Or To Sub-Base, If Used coded

and identified in the low voltage wiring chart. Pigtail the thermostat wiring to the proper internal low voltage wiring with the wire nuts provided. Using a U.L. approved electrical tape, secure the wire nuts to the wire.

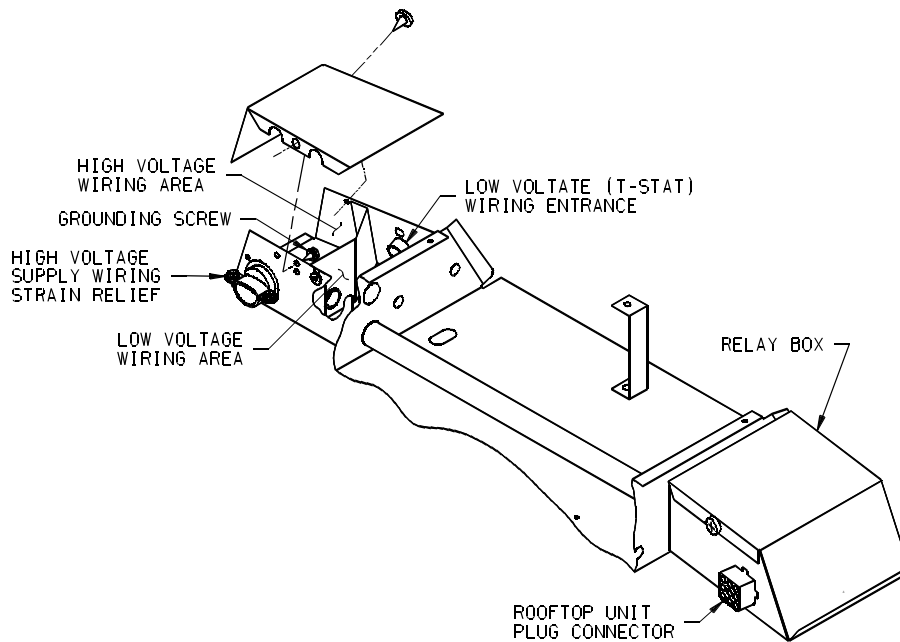


FIGURE 1

SECTION IV. — OPERATION

With the wiring completed, reinstall the voltage box cover and the ceiling shroud. Connect the power supply (both the 12 VDC and 115 VAC). For operation checkout, refer to the

Operation And Maintenance Instructions packed with the roof top unit.

SECTION V. — MAINTENANCE AND WARRANTY


SHOWS POSITION OF SWITCH		OPERATION
SYSTEM	FAN	
HEAT COOL OFF FAN	AUTO ON HI LO LO HI	
☐ ☐ ☒ ☐	☐ ☐ ☐ ☐	No functions occur.
☐ ☐ ☐ ☒	☐ ☐ ☐ ☐	Air conditioner fan runs at high speed continuously regardless of fan switch setting or setpoint. No other functions occur.
☐ ☒ ☐ ☐	☒ ☐ ☐ ☐	Air conditioner compressor and high speed fan cycle to satisfy setpoint.
☐ ☒ ☐ ☐	☐ ☒ ☐ ☐	Air conditioner compressor and low speed fan cycle to satisfy setpoint.
☐ ☒ ☐ ☐	☐ ☐ ☒ ☐	Air conditioner compressor cycles to satisfy setpoint. Air conditioner low speed fan runs continuously.
☐ ☒ ☐ ☐	☐ ☐ ☐ ☒	Air conditioner compressor cycles to satisfy setpoint. Air conditioner high speed fan runs continuously.
☒ ☐ ☐ ☐	☐ ☐ ☐ ☐	All a/c operations remain off. Fan switch has no effect on any blower operations. On Cool Only Model; Furnace cycles from thermostat. On Heat/Cool Model; Electric heat strip and low speed fan cycle from thermostat. If sub-base is used, furnace will cycle as called for by switch.

Maintenance and warranty information are covered in the Operation and Maintenance Instructions packed with the roof top unit.


All cooling functions controlling to setpoint have a short cycle protection time delay of 3 minutes. There will be no delay if the cycle OFF time exceeds 3 minutes.

WIRING DIAGRAM

6799-720

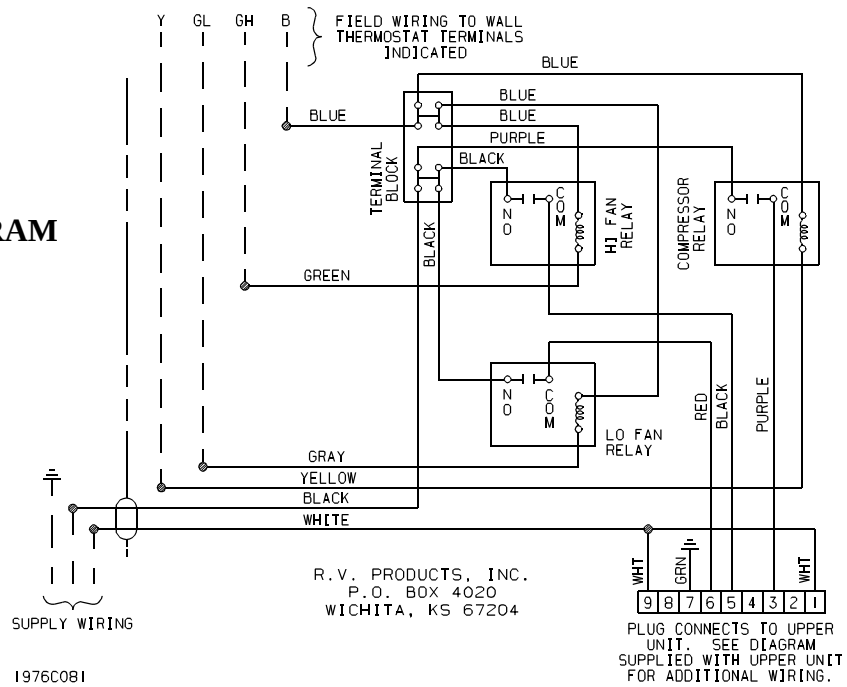

6799-725, 6799-726

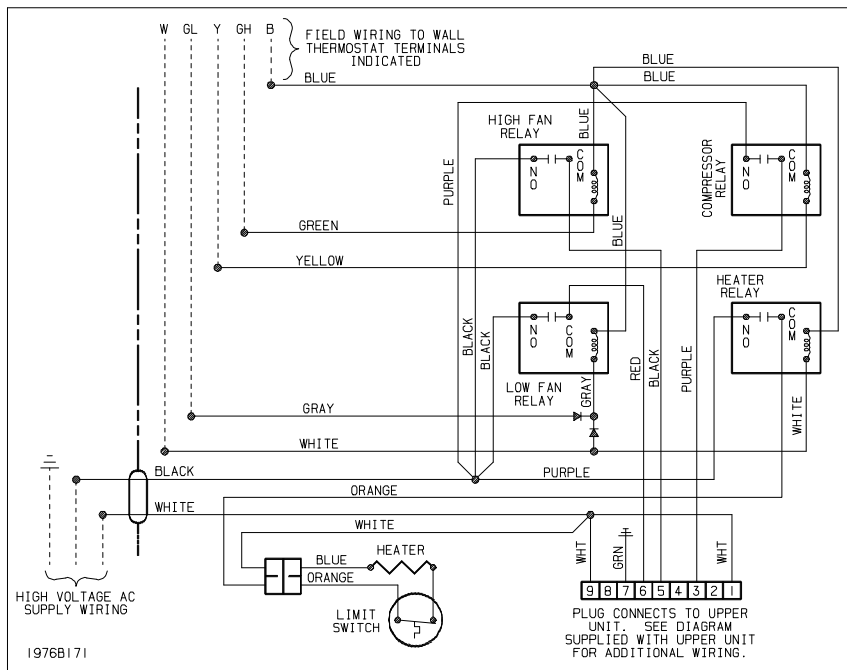



RV Products
A Division of Airxcel, Inc.
P.O. Box 4020
Wichita, KS 67204

1976E082 (2-01) PP



This manual is provided courtesy of **RV Tech Cheat Sheet**



Professional resources for the whole RV industry — free.

We put manuals, wiring diagrams and hard-won tech knowledge in every technician's hands, so repairs get done right the first time, techs work faster, and RV owners everywhere get better service.



rvtechcheatsheet.com/manuals

Find thousands more RV manuals, wiring diagrams and parts lists

RV techs: share fixes, ask questions and learn from each other.

Join our free Facebook group →



Follow proper safety practices. If in doubt, consult a professional RV technician.