



1485 Jacobs Rd. Deland, FL 32724
386.738.7307

10 Negative Switched Low Watt Outputs (0.1A Load) 00-00923-000 PMC Output Modules

PMC I/O Modules 00-00923-000 is the newest member of Intellitec's Programmable Multiplex Control family and is a direct replacement for the 00-00702-320 / 330 module. This works in combination with the PMC CPU and other standard, semi-custom or custom I/O modules, allowing you to create the exact system configuration that you want from basic to all encompassing.

There are ten connections for low wattage loads, such as dash warnings lights, beepers, or light-duty loads (1.0 Ampere Max per module). The PMC CPU utilizes input information from other modules on the system, and via the PMC communications link controls the ten loads of this module. All of the output harnesses are connected with AMP Mate-N-Lok connectors to reduce installation time and errors.

All loads are negative (low-side), switched to a local load ground which needs to be provided to the module. In other words, the outputs are connected between the load and ground. (*Different than the 406/416 module which provides for high-side switching*). A fused load power connection is available at the module. The intended use of the fused power terminations, (J1-1 or J3-4), is not for loads such as OEM switches that require a power source.


Advanced Diagnostic:

- * **Output LED** indicators (Green) illuminates when the a return ground path connection is created by PMC logic block as shown in the pictorial to the right.
- * **IPX Com Fault LED** (Red) illuminates if there is a loss of communication to the module.
- * **Overload Indicator** (Red) illuminates when one or all of the Output channel(s) total current exceeds 1.5 Amps for greater than 10 milliseconds, indicating a short circuit condition. During a short circuit condition, all output channels are turned off. **NOTE:** After a 5 second delay, the output channels will turn on (if still active) to check and see if the over current condition has cleared or not.
- * **Auto-Reset** feature allows for automatic recovery from the over current condition. If a fault did occur the on-board processor checks the status of the output(s) every 5 seconds to determine if the channel(s) may be turned back on and the output module re-activated.
- * **Optical isolation** is provided to ensure the external or the output channels does not corrupt the integrity of the communication link.



Pat. No. 4,907,222 & 6,011,997

The module dimensions are 6.375" X 4.375" X 1.875" (16.2mm X 12mm X 4.8mm). The module is intended to be installed in a protected environment inside of the vehicle.

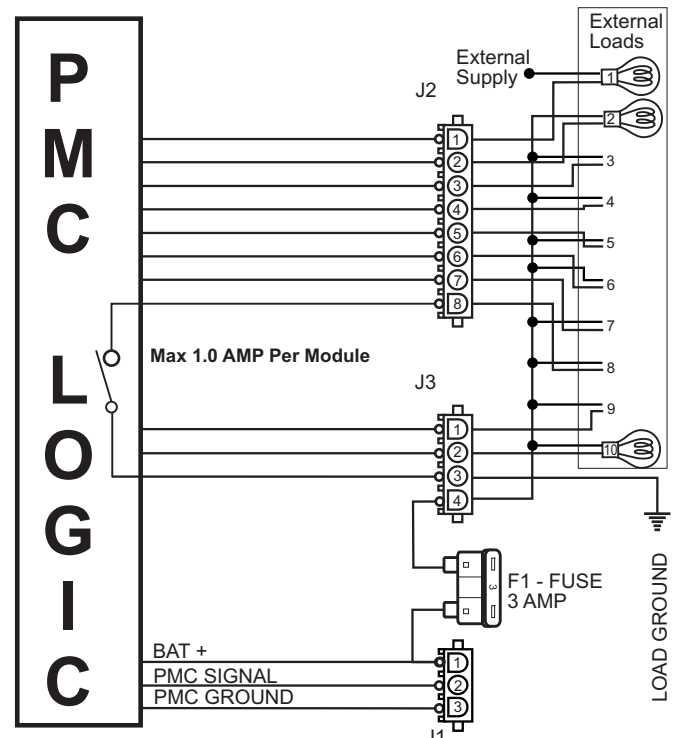

**Intellitec**1485 Jacobs Rd. Deland, FL 32724
386.738.7307**10 Negative Switched Low Watt Outputs (0.1A Load)****00-00923-000 PMC Output Modules****SPECIFICATIONS****General Connections****00-00923-000**

Nominal Vehicle Voltage

12V / 24V

J3-4 Fuse 1, Load Power^{#1}

3 Amps Max.

J3-3 Local Load Ground

J1-1 Bat + (From CPU)^{#1}

J1-2 PMC Signal

18 awg Min.

J1-3 PMC Ground

14 awg Min.

*#1 Module no longer support providing battery / system power to external switches and modules.***CHANNEL DESIGNATIONS**

Channel	Connection	Type	Name	Rating
1	J2 -1	Output, Negative Switch to Gnd	Load 1	0.1 Amp
2	J2 -2	Output, Negative Switch to Gnd	Load 2	0.1 Amp
3	J2 -3	Output, Negative Switch to Gnd	Load 3	0.1 Amp
4	J2 -4	Output, Negative Switch to Gnd	Load 4	0.1 Amp
5	J2 -5	Output, Negative Switch to Gnd	Load 5	0.1 Amp
6	J2 -6	Output, Negative Switch to Gnd	Load 6	0.1 Amp
7	J2 -7	Output, Negative Switch to Gnd	Load 7	0.1 Amp
8	J2 -8	Output, Negative Switch to Gnd	Load 8	0.1 Amp
9	J3 -1	Output, Negative Switch to Gnd	Load 9	0.1 Amp
10	J3 -2	Output, Negative Switch to Gnd	Load 10	0.1 Amp


MATING CONNECTIONS

Designator	Function	Connector	Mating Part #	Contact, Typical	
				For 14-18 AWG	for 10-12 AWG
J1	PMC Link	3 Pin Amp Mate-N-Lok	1-480700-0	350919-3	640310-3
J2	Loads	8 Pin Amp Mate-N-Lok	1-480702-0	350919-3	640310-3
J3	Loads, Power, GND	4 Pin Amp Mate-N-Lok	640586-1	350919-3	640310-3

MODULE SETTINGS

Module can be set for 1 of 16 address, A-P.

A-P. Set four dip switches, Sw1, per table on right.

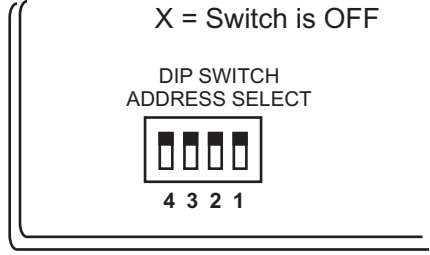	DIP SWITCH	MODULE	DIP SWITCH	MODULE
	4 3 2 1	Address	4 3 2 1	Address
	0 0 0 0	A	X 0 0 0	I
	0 0 0 X	B	X 0 0 X	J
	0 0 X 0	C	X 0 X 0	K
	0 0 X X	D	X 0 X X	L
	0 X 0 0	E	X X 0 0	M
	0 X 0 X	F	X X 0 X	N
	0 X X 0	G	X X X 0	O
	0 X X X	H	X X X X	P



This manual is provided courtesy of **RV Tech Cheat Sheet**



Professional resources for the whole RV industry — free.

We put manuals, wiring diagrams and hard-won tech knowledge in every technician's hands, so repairs get done right the first time, techs work faster, and RV owners everywhere get better service.



rvtechcheatsheet.com/manuals

Find thousands more RV manuals, wiring diagrams and parts lists

RV techs: share fixes, ask questions and learn from each other.

Join our free Facebook group →



Follow proper safety practices. If in doubt, consult a professional RV technician.