



COSMO 2 EURO
COLLAPSIBLE TABLE LEG
OWNER'S MANUAL

TABLE OF CONTENTS

Introduction	2
Safety	3
Operation	4
Troubleshooting	6
Maintenance	6
Notes	7

Introduction

Lippert's COSMO 2 Euro Collapsible Table Leg has telescoping cylinders powered by gas struts for easy height adjustment and the table can slide as needed to fully optimize interior space.

Additional information about this product can be obtained from [lci1.com/support](https://support.lci1.com/support) or by downloading the free LippertNOW app. The app is available on Apple App Store® for iPhone® and iPad® and also on Google Play™ for Android™ users.

Apple App Store®, iPhone®, and iPad® are registered trademarks of Apple Inc.

Google Play™ and Android™ are trademarks of Google Inc.

For information on the assembly or individual components of this product, please visit:

<https://support.lci1.com/lci-interiors>.

NOTE: Images used in this document are for reference only when assembling, installing and/or operating this product. Actual appearance of provided and/or purchased parts and assemblies may differ.

Safety

Read and understand all instructions before installing or operating this product. Adhere to all safety labels.

This manual provides general instructions. Many variables can change the circumstances of the instructions, i.e., the degree of difficulty, operation and ability of the individual performing the instructions. This manual cannot begin to plot out instructions for every possibility, but provides the general instructions, as necessary, for effectively interfacing with the device, product or system. Failure to correctly follow the provided instructions may result in death, serious personal injury, severe product and/or property damage, including voiding of the Lippert limited warranty.

WARNING

The "WARNING" symbol above is a sign that a procedure has a safety risk involved and may cause death or serious personal injury if not performed safely and within the parameters set forth in this manual.

WARNING

Failure to follow instructions provided in this manual may result in death, serious personal injury and/or severe product and property damage, including voiding of the component warranty.

CAUTION

The "CAUTION" symbol above is a sign that a safety risk is involved and may cause personal injury and/or product or property damage if not safely adhered to and within the parameters set forth in this manual.

CAUTION

Always wear eye protection when performing service, maintenance or installation procedures. Other safety equipment to consider would be hearing protection, gloves and possibly a full face shield, depending on the nature of the task.

Operation


The Lippert COSMO 2 Euro Collapsible Table Leg gas struts makes height adjustment easy and the convenient paddle control makes lateral movement of the table top a breeze when accommodating for comfort.

⚠ CAUTION

Moving parts can pinch, crush or cut. Keep clear and use caution.


1. To raise the table from its collapsed position, pull the height adjustment handle (Fig. 1A) and lift to raise the table (Fig. 1).
2. Move the height adjustment handle back into its locked position.
3. To lower (collapse) the table, pull the height adjustment handle then press down until it stops.
4. Move the height adjustment handle back into its locked position.

Fig. 1

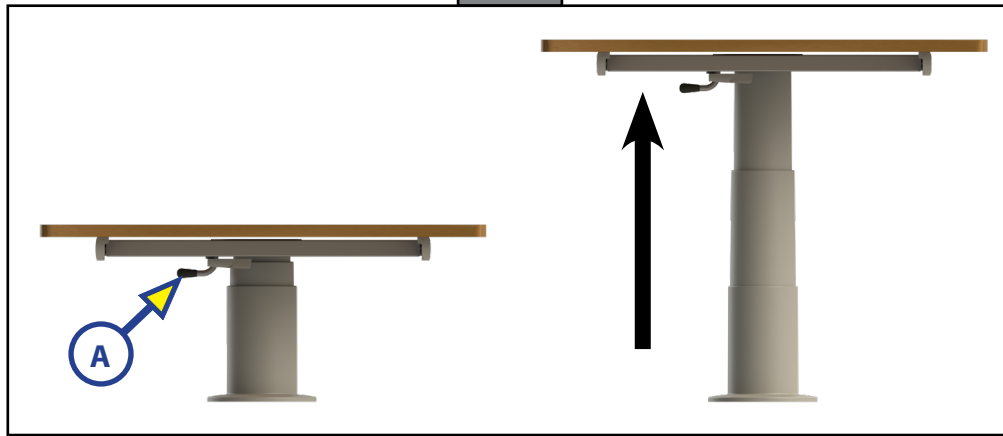


5. For lateral movement of the table top, pull the slide handle (Fig. 2A) outward (Fig. 2B).

Fig. 2

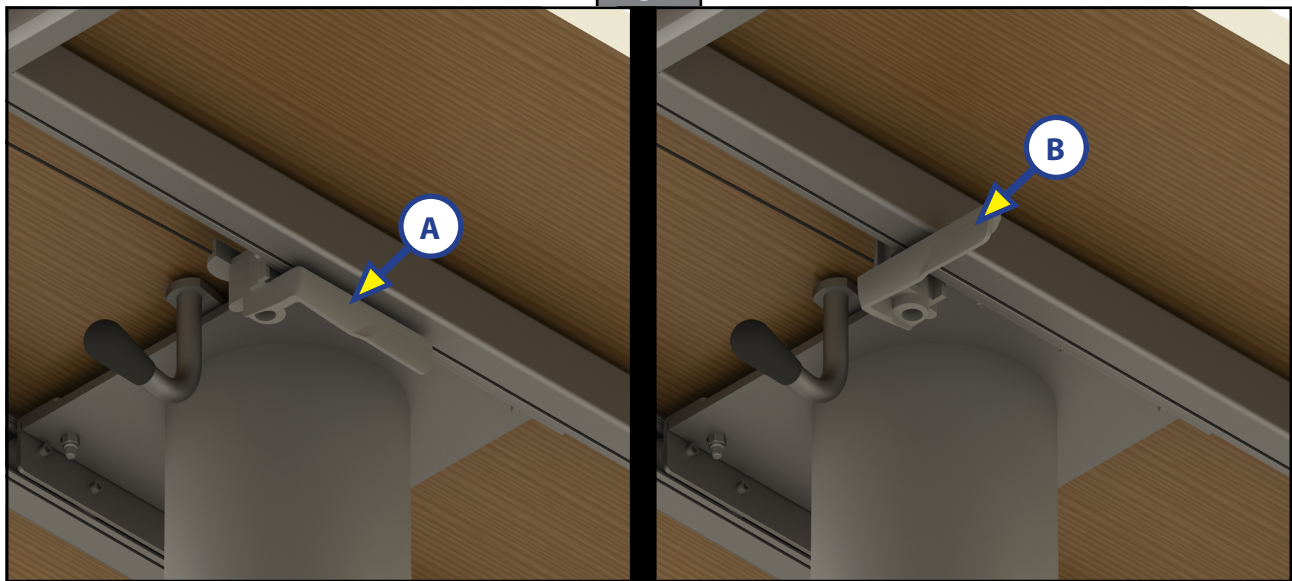

6. Slide the table top left, right, forward, backward or any combination thereof, then push the slide handle inward to lock the position of the table top in place (Fig. 3).

Fig. 3

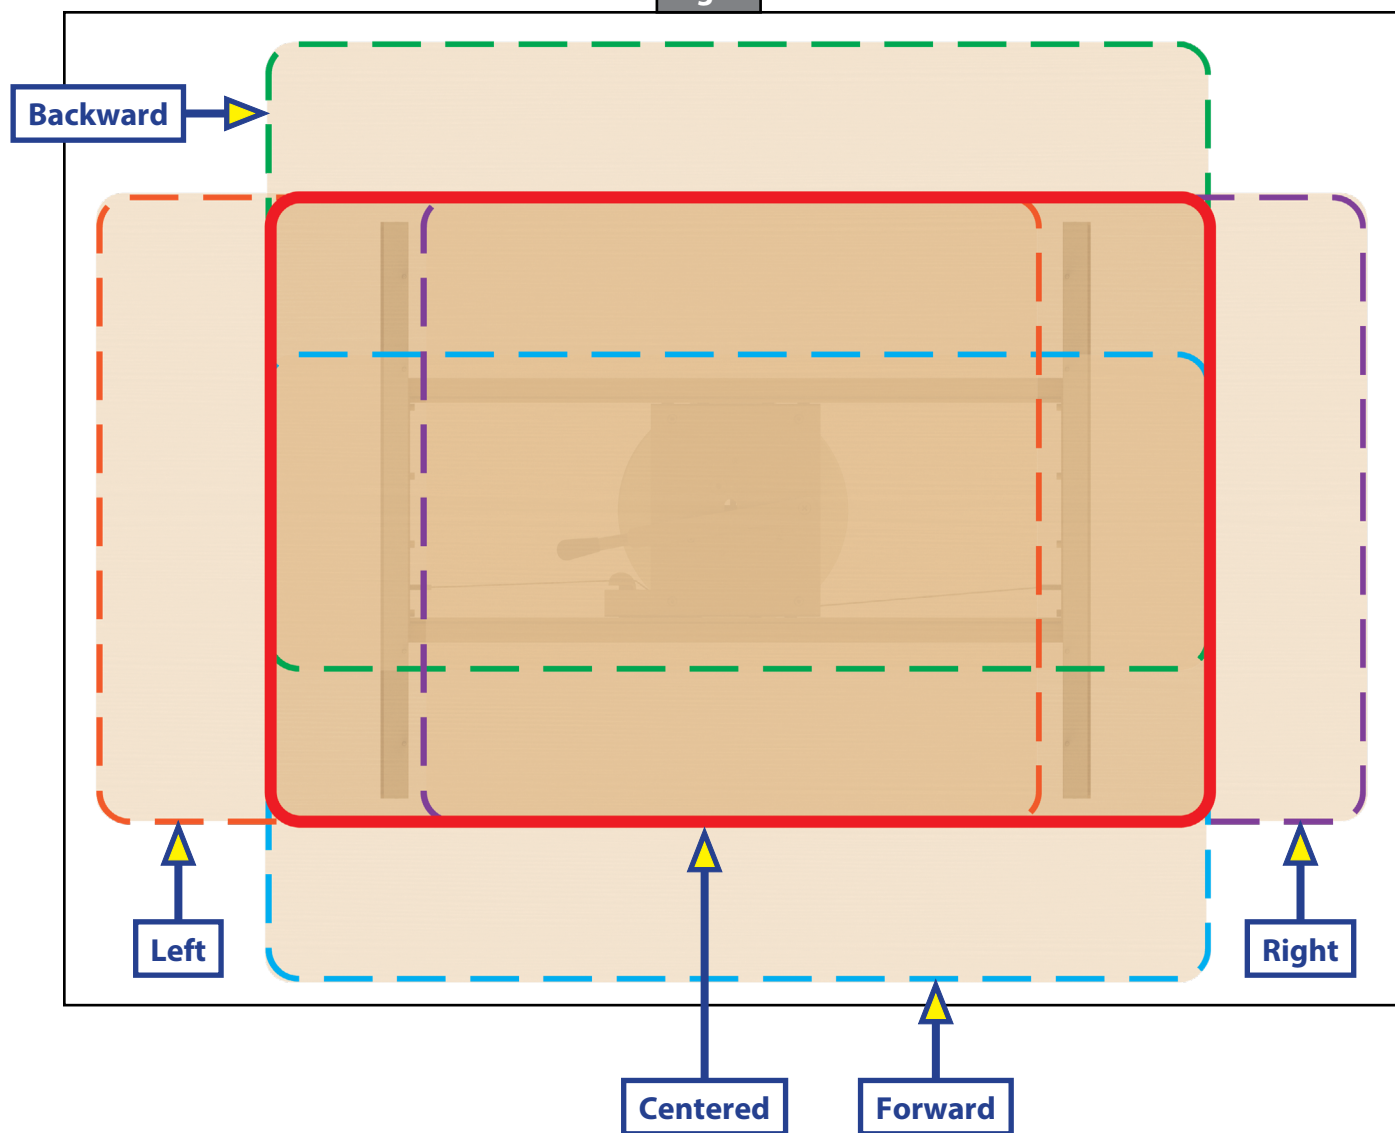

Troubleshooting

What is Happening	Why?	What Should Be Done?
Table does not raise/lower.	Release handle is in locked position.	Unlock release handle.
	Obstruction in leg.	Inspect locking mechanism under the table top for any type of obstruction. Lift decorative leg coverings and inspect for any type of obstruction. Clear obstruction(s).
	Inoperative gas strut.	Lift decorative leg coverings and inspect gas struts for any type of damage or loose/missing anchoring fasteners. Contact Lippert Care Center customerservice@lci1.com , (432) 547-7378.
Table does not lock into raised/ lowered position.	Release handle is in unlocked position.	Lock release handle.
	Obstruction in leg.	Inspect locking mechanism under the table top for any type of obstruction. Clear obstruction.
	Inoperative release handle.	Inspect release handle under the table top for any type of damage or loose connection. Contact Lippert Care Center customerservice@lci1.com , (432) 547-7378.
Table does not slide into position.	Positioning paddle is in locked position.	Unlock positioning paddle.
	Obstruction in positioning paddle mechanism.	Inspect positioning paddle mechanism under the table top for any type of obstruction. Clear obstruction.
	Missing/broken/loose locking cable.	Inspect positioning paddle mechanism under the table top for missing/broken/loose locking cable. Contact Lippert Care Center customerservice@lci1.com , (432) 547-7378.
Table does not lock into slid position.	Positioning paddle is in unlocked position (paddle is pulled out).	Lock positioning paddle (push paddle in).
	Positioning paddle is worn or damaged.	Replace positioning paddle. Contact Lippert Care Center customerservice@lci1.com , (432) 547-7378.
	Positioning cable is missing/loose/damaged.	Tighten loose cable or replace cable. Contact Lippert Care Center customerservice@lci1.com , (432) 547-7378.

Maintenance

The Lippert COSMO 2 Euro Collapsible Table Leg requires very little maintenance. The gas struts are sealed in the cylinders. The only required maintenance is keeping the leg and the release/lock mechanism and the table top slide positioning mechanism clean and free of debris.

This image shows a full page of blank white paper with horizontal ruling lines. The lines are evenly spaced and run across the width of the page, typical of notebook paper or a document template. There are no margins, text, or other markings present.



The contents of this manual are proprietary and copyright protected by Lippert. Lippert prohibits the copying or dissemination of portions of this manual unless prior written consent from an authorized Lippert representative has been provided. Any unauthorized use shall void any applicable warranty. The information contained in this manual is subject to change without notice and at the sole discretion of Lippert. Revised editions are available for free download from lippert.com.

Please recycle all obsolete materials.

For all concerns or questions, please contact Lippert
Ph: 432-LIPPERT (432-547-7378) | Web: lippert.com | Email: customerservice@lci1.com



This manual is provided courtesy of **RV Tech Cheat Sheet**



Professional resources for the whole RV industry — free.

We put manuals, wiring diagrams and hard-won tech knowledge in every technician's hands, so repairs get done right the first time, techs work faster, and RV owners everywhere get better service.



rvtechcheatsheet.com/manuals

Find thousands more RV manuals, wiring diagrams and parts lists

RV techs: share fixes, ask questions and learn from each other.

Join our free Facebook group →



Follow proper safety practices. If in doubt, consult a professional RV technician.