

Master Owner's Manual

Furniture



LIPPERT
COMPONENTS®

User notice

The Table of Contents is an interactive field. Click on the desired section to be taken immediately to the corresponding page.

Master Owner's Manual

The Master Owner's Manual is intended to provide information on Lippert Components Inc.'s most widely-used products. Products described in the Master Owner's Manual may not be on every trailer. The trailer may also have products not included in this manual. All manual information is subject to change without notice. Revised editions will be available for free download at lci1.com/support. Manual information is considered factual until made obsolete by a revised version. Manual information may be distributed as a complete document only, unless Lippert Components provides explicit consent to distribute individual parts.

TABLE OF CONTENTS

VARIABLE HEIGHT TABLE PEDESTAL	4
Introduction	4
Minimum Pedestal Heights	5
Safety	5
Operation	6
Extending	6
Retracting	6
Adjustment	7
Troubleshooting	7
Maintenance	7
TRI-FOLD SOFA	8
Introduction	8
Safety Information	9
FOREST RIVER DINETTE SEATBACK	10
Introduction	10
Safety	10
Operation	11


VARIABLE HEIGHT TABLE PEDESTAL

FURNITURE

Introduction




The Variable Height Table Pedestal (Fig. 1) has two telescoping cylinders, powered by gas struts, that allow the pedestal height to be adjusted from 13" to 28". The top cylinder extends a maximum of 8 1/2" and the bottom cylinder extends a maximum of 9".

For information on the assembly or individual components of this product, please visit:
<https://support.lci1.com/lci-interiors>.

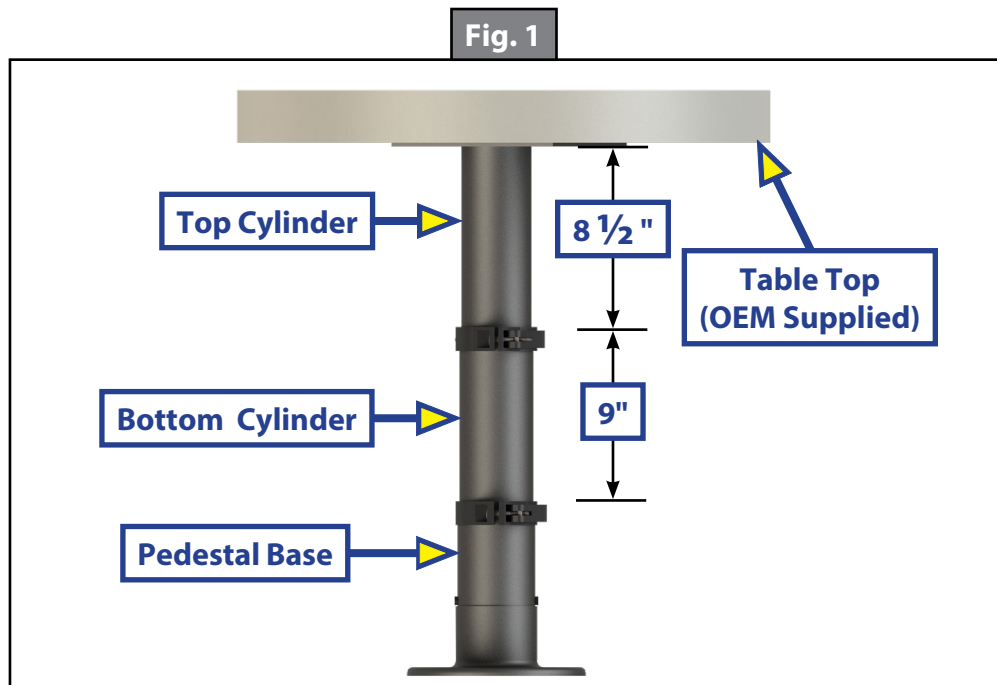

Minimum Pedestal Heights

- Both cylinders compressed (Fig. 2).
- Bottom cylinder extended, and the upper cylinder compressed (Fig. 3).
- Top cylinder extended, lower cylinder compressed (Fig. 4).

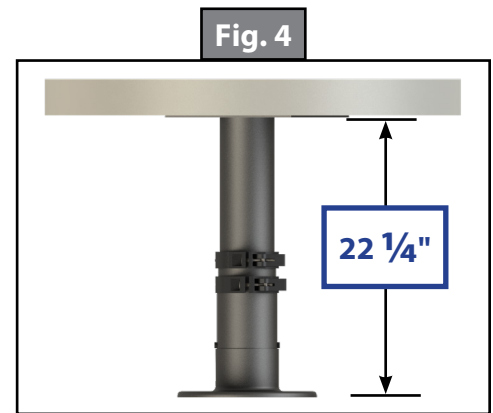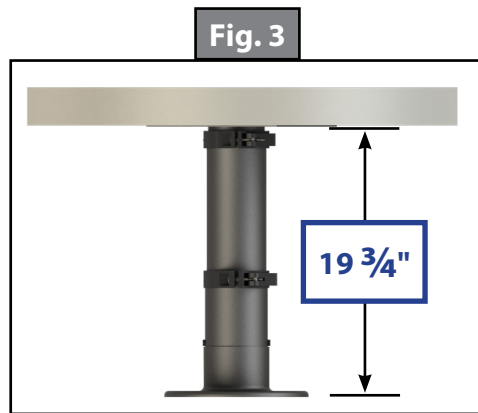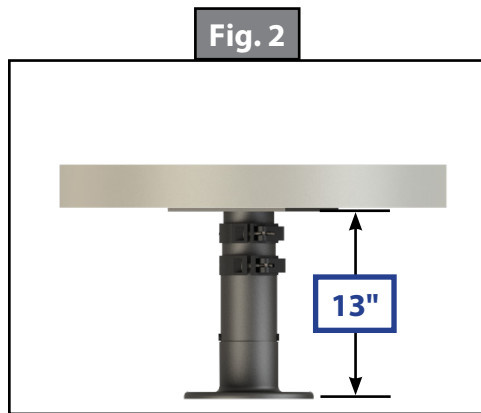

Safety

Read and fully understand all instructions before installing and operating this product. Adhere to all safety labels.

This manual provides general instructions. Many variables can change the circumstances of the instructions, i.e., the degree of difficulty, operation and ability of the individual performing the instructions. This manual cannot begin to plot out instructions for every possibility, but provides the general instructions, as necessary, for effectively interfacing with the device, product or system. Failure to correctly follow the provided instructions may result in death, serious personal injury, severe product and/or property damage, including voiding of the LCI limited warranty.

WARNING

The "WARNING" symbol above is a sign that a procedure has a safety risk involved and may cause death or serious personal injury if not performed safely and within the parameters set forth in this manual.

WARNING

Failure to follow instructions provided in this manual may result in death, serious personal injury and/or severe product and property damage, including voiding of the component warranty.

CAUTION

The "CAUTION" symbol above is a sign that a procedure has a safety risk involved that may cause personal injury and/or product damage, including voiding of warranty, if not performed safely and in accordance with the safety procedures stated herein.

CAUTION

Moving parts can pinch, crush or cut. Keep clear and use caution.

Operation

Extending


⚠ WARNING

Keep people and pets clear of the table top when raising the Variable Height Table Pedestal. The cylinder extends quickly when the locking collar handle is released.

⚠ CAUTION

Make sure to push down on the CENTER of the table top. Pushing down on the edge could pull the table top away from the pedestal or crack the table top.

1. Pull the handle (Fig. 5A) on one of the locking collars away from the table pedestal. This will disengage the clamp that holds the cylinder in place (Fig. 5B). The strut will then extend the cylinder to its full height or, if less than the full cylinder height is needed, have a second person push down on the center of the table until the cylinder is at the desired height.

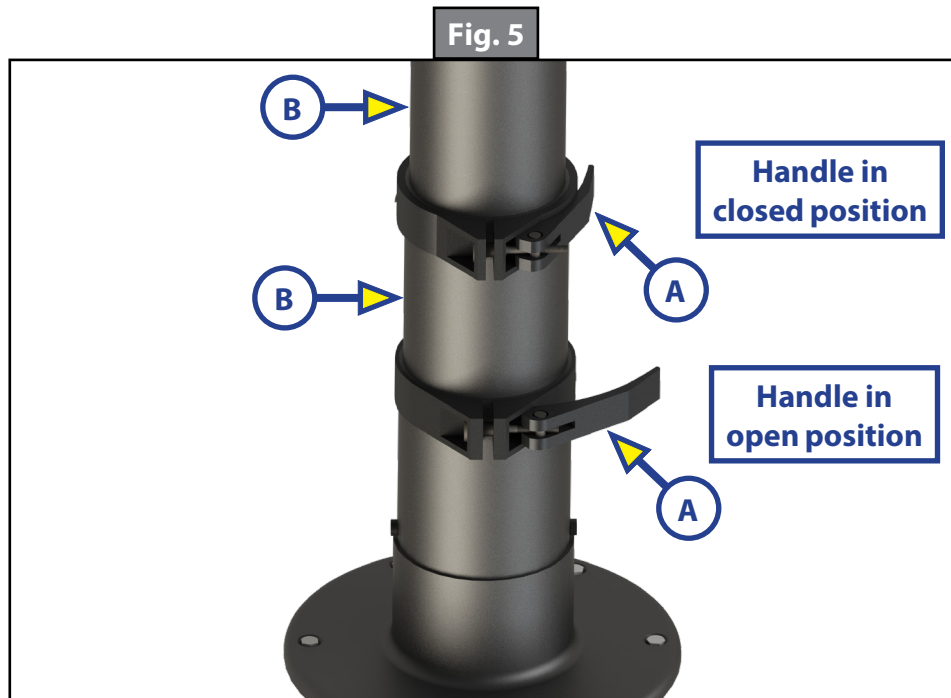

2. Push the handle back towards the cylinder to lock the cylinder into the desired height.
3. Repeat steps 1 and 2 for the other cylinder, if necessary.

Retracting

NOTE: The assistance of a second person is recommended for retracting.

1. Pull the handle (Fig. 5A) on the cylinder that is being retracted.

⚠ CAUTION


Make sure to push down on the CENTER of the table top. Pushing down on the edge could pull the table top away from the pedestal or crack the table top.

2. Have the second person push down on the center of the table until the cylinder is retracted at the desired height.
3. Push the handle back towards the cylinder to lock the cylinder into the desired height.
4. Repeat steps 1 through 3 for the other cylinder, if necessary.

Adjustment

If a cylinder creeps up after it has been retracted and locked, the collar can be tightened by hand-turning the thumbscrew (Fig. 6A) on the locking collar (Fig. 6B).

- 1. Pull the handle (Fig. 6C) on the locking collar open.

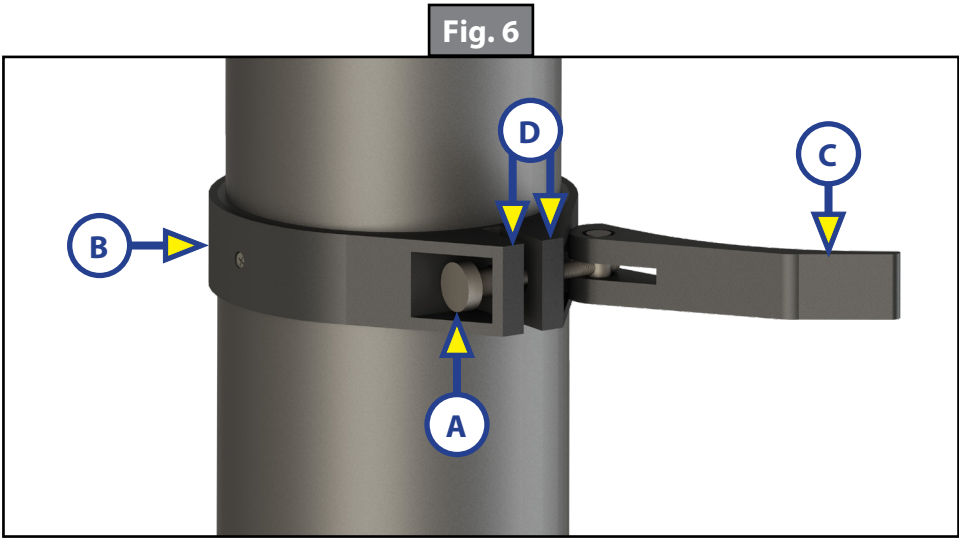

- 2. Hand-tighten the thumbscrew to pull the edges (Fig. 6D) of the collar closer together, making sure to leave some gap between the edges.
- 3. After tightening, make sure that the handle closes correctly. If it is difficult to close the handle, unscrew the thumb nail slightly then try closing the handle again.

Troubleshooting

What Is Happening?	Why?	What Should Be Done?
Table will not raise.	Too much weight on the table.	Reduce weight or manually assist the table in raising.
	Levers are not released.	Check to make sure level is fully released.
	Object obstruction.	Make sure there is nothing preventing the table from raising fully.
Table will not lower.	Locking collar too tight.	Check to make sure thumb screw is not too tight.
	Levers are not released.	Check to make sure lever is fully released.
	Object obstruction.	Make sure there is nothing preventing the table from lowering fully.
Table is creeping upwards.	Lever is not closed.	Make sure lever is fully closed.
	Locking collar is too loose.	Adjust thumb screw.
Table is creeping downwards.	Lever is not closed.	Make sure lever is fully closed.
	Locking collar is too loose.	Adjust thumb screw.
	Too much weight on the table.	Reduce weight on the table.

Maintenance

The Variable Height Table Pedestal requires very little maintenance. The gas struts are sealed in the cylinders. The only required maintenance involves keeping the columns clean and free of debris.

TRI-FOLD SOFA

FURNITURE

Introduction

Our one-piece, steel frame Tri-Fold Sofa requires no spare mattress to store. In just four simple steps, it transforms into a comfortable bed. Traditional hide-a-beds have uncomfortable mattresses with support bars that can make sleeping uncomfortable. Air mattress hide-a-beds eliminate the support bar issue, but can be damaged more easily and become unusable. The Tri-Fold Sofa converts from sofa to a very supportive, high-density foam sleep surface in four simple steps. Now campers can actually look forward to sleeping on the couch!

Additional information about this product can be obtained from www.lci1.com/support or by downloading the free myLCI app. The app is available on iTunes® for iPhone® and iPad® and also on Google Play™ for Android™ users.

iTunes®, iPhone®, and iPad® are registered trademarks of Apple Inc. Google Play™ and Android™ are trademarks of Google Inc.

Safety Information

⚠ CAUTION

Moving parts can pinch, crush or cut. Keep clear and use caution.

⚠ WARNING


Failure to follow the instructions provided in this manual may result in death, serious injury, unit damage, or voiding of the component warranty.

Operation Instructions

NOTE: Refer to Fig. 1 for steps 1-5.

1. Remove back cushions from the hook and loop fabric strips and set aside.
2. Fold out the couch seat to expose the middle seat.
3. Fold out the couch seat legs and set upright.
4. Fold down the stationary back.
5. Use back cushions as headrest or pillows.

Fig. 1

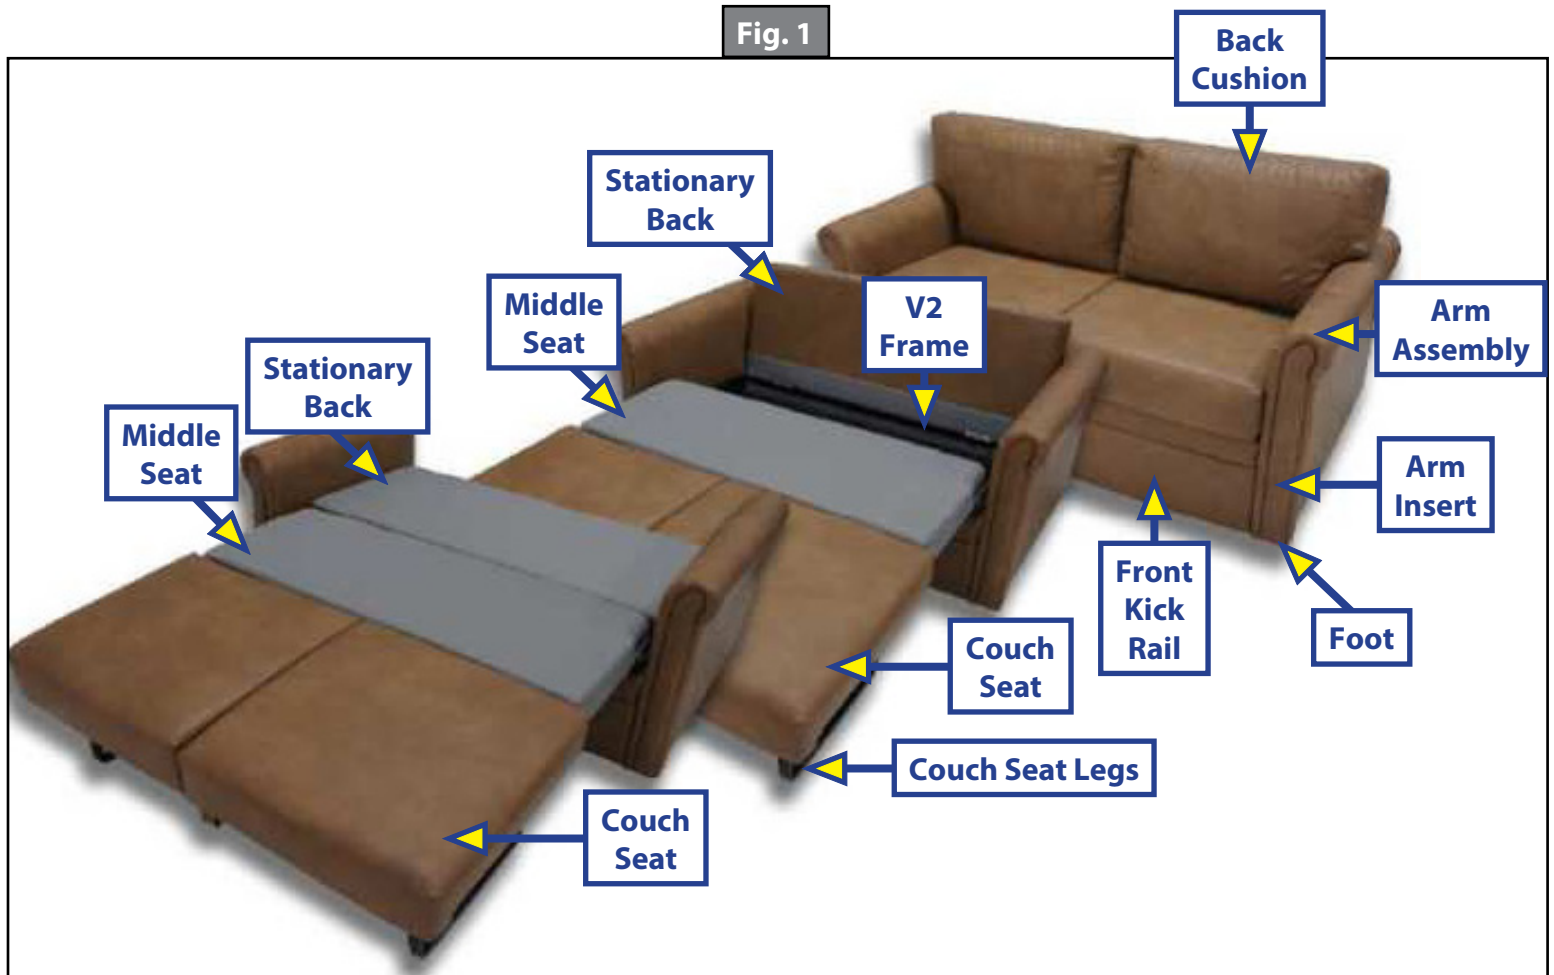

FOREST RIVER DINETTE SEATBACK

FURNITURE

Introduction

The modular dinette seatback provides for seating at the dinette or the lounge. The backrest brackets installed on the dinette/lounge cushions provide for placement in two positions, either installed as a dinette backrest or repositioned for use as a lounge backrest. Brackets to hold the backrest are installed on both sides of the seat.

Safety

Read and understand all instructions before installing this product. Adhere to all safety labels. This manual provides general instructions. Many variables can change the circumstances of the instructions, i.e., the degree of difficulty, operation and ability of the individual performing the instructions. This manual cannot begin to plot out instructions for every possibility, but provides the general instructions, as necessary, for effectively interfacing with the device, product or system. Failure to correctly follow the provided instructions may result in death, serious personal injury, severe product and/or property damage.

WARNING

The "WARNING" symbol above is a sign that a procedure has a safety risk involved and may cause death or serious personal injury if not performed safely and within the parameters set forth in this manual.

CAUTION

The "CAUTION" symbol above is a sign that a procedure has a safety risk involved and may cause serious personal injury and/or severe product or property damage if not performed safely and within the parameters set forth in this manual.

CAUTION

Moving parts can pinch, crush or cut. Keep clear and use caution.

Operation

⚠ CAUTION

Make sure the backrest posts are completely seated in the brackets (Fig. 1). Improper placement could cause the backrest to tip over and cause injury.

1. Install the seatback in the brackets behind the lounge seat for the lounge position (Fig. 2).
2. Move the dinette seatback and install in the other set of seat brackets to create dinette seating (Fig. 3).

Fig. 1

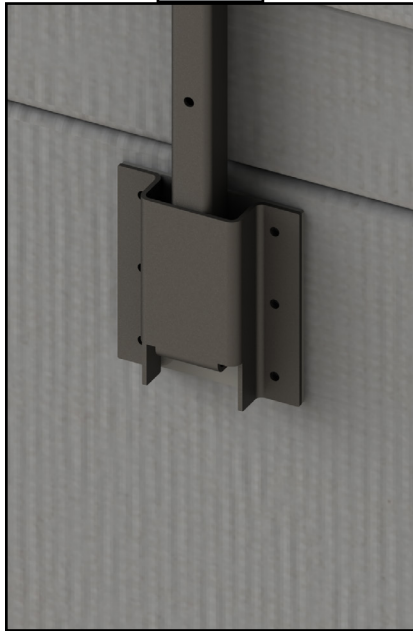


Fig. 2


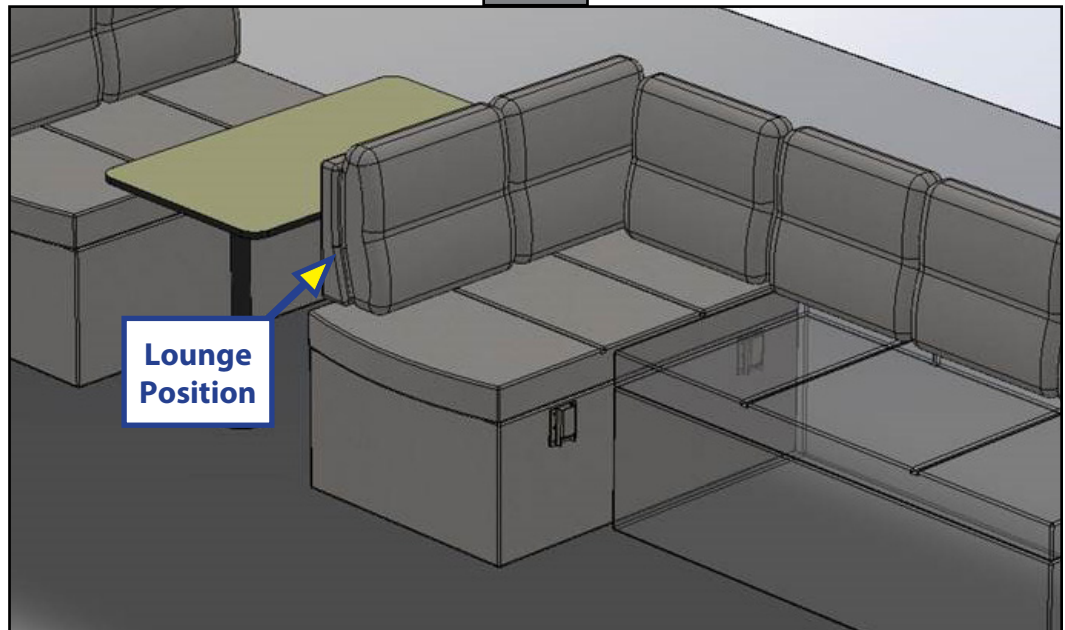


Fig. 3



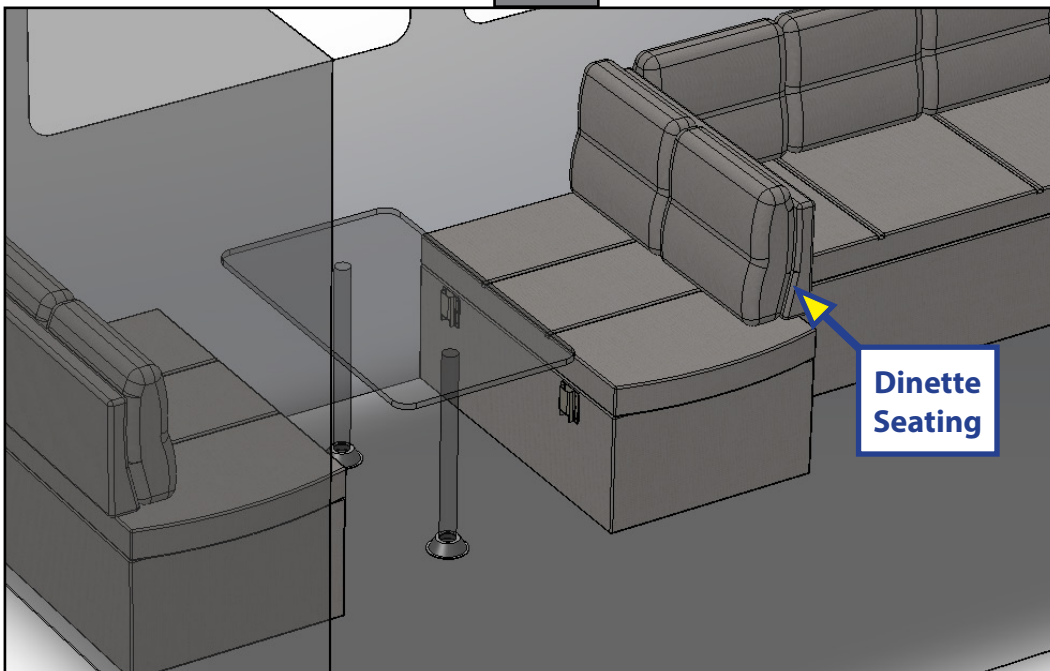

LIPPERT
COMPONENTS®

The contents of this manual are proprietary and copyright protected by Lippert Components, Inc. ("LCI"). LCI prohibits the copying or dissemination of portions of this manual unless prior written consent from an authorized LCI representative has been provided. Any unauthorized use shall void any applicable warranty. The information contained in this manual is subject to change without notice and at the sole discretion of LCI. Revised editions are available for free download from lci1.com.

Please recycle all obsolete materials.

For all concerns or questions, please contact
Lippert Components, Inc.

Ph: 574-537-8900 | Web: lci1.com | Email: customerservice@lci1.com



This manual is provided courtesy of **RV Tech Cheat Sheet**



Professional resources for the whole RV industry — free.

We put manuals, wiring diagrams and hard-won tech knowledge in every technician's hands, so repairs get done right the first time, techs work faster, and RV owners everywhere get better service.



rvtechcheatsheet.com/manuals

Find thousands more RV manuals, wiring diagrams and parts lists

RV techs: share fixes, ask questions and learn from each other.

Join our free Facebook group →



Follow proper safety practices. If in doubt, consult a professional RV technician.