

FURNITURE

Purpose



This document provides the steps to replace the swivel glider chair's seat back.

⚠ CAUTION



Moving parts can pinch, crush or cut. Keep clear and use caution.

Instructions

1. Lift up the vinyl flap (Fig. 1A) on the back of the chair to expose the inner brackets (Fig. 2A and Fig 2B).

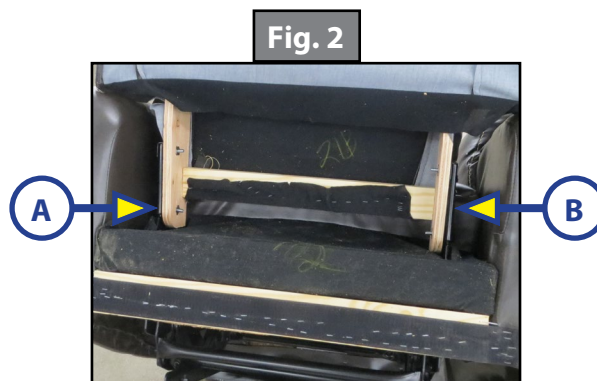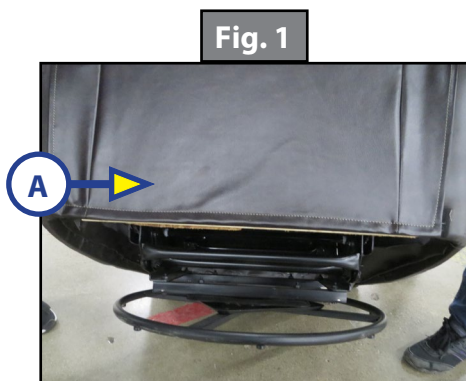

2. To remove the old seat back, lift up on the back until the back slides out of the brackets.
3. Place the new replacement back on the bottom portion of the chair (Fig. 3).
4. Align the connecting brackets from the seat back (Fig. 4A) of the chair to the connecting brackets on the bottom of the swivel chair (Fig. 4B).
5. Slide the connecting bracket from the back of the chair into the connecting brackets on the base of the chair (Fig. 5A).
6. Lower the vinyl flap and press the hook and loop fabric back down along the bottom of the chair.

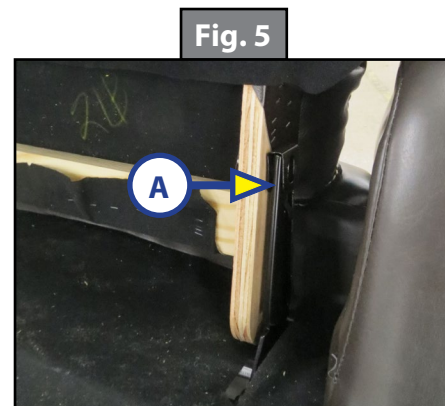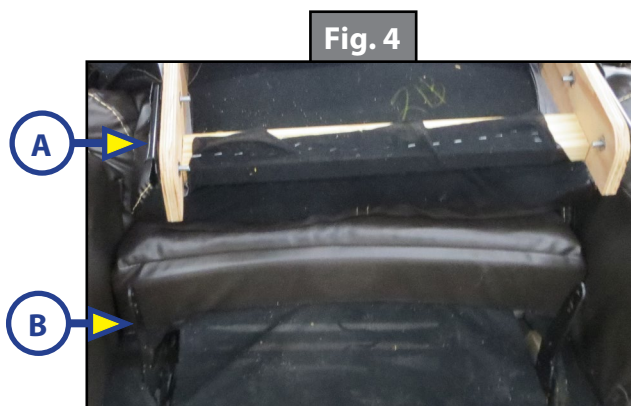

As a supplier of components to the RV industry, safety, education and customer satisfaction are our primary concerns. Should you have any questions, please do not hesitate to contact us at (574) 537-8900 or by email at customerservice@lci1.com. Self-help tips, technical documents, product videos and a training class schedule are available at lci1.com or by downloading the MyLCI app.



This manual is provided courtesy of **RV Tech Cheat Sheet**



Professional resources for the whole RV industry — free.

We put manuals, wiring diagrams and hard-won tech knowledge in every technician's hands, so repairs get done right the first time, techs work faster, and RV owners everywhere get better service.



rvtechcheatsheet.com/manuals

Find thousands more RV manuals, wiring diagrams and parts lists

RV techs: share fixes, ask questions and learn from each other.

Join our free Facebook group →



Follow proper safety practices. If in doubt, consult a professional RV technician.