



Encoder Test 2

Dual Planetary Gear Motor Sync with Control Box 1510000199

© Copyright Power Gear January 2013

Tip Sheet # 82-S0529, Rev. OA

! WARNING

Always make sure that the slide-out room path is clear of people and objects before and during operation of the slide out room. Always keep away from the slide-out rails when the room is being operated. The gear assembly may pinch or catch on loose clothing.

When the encoder is unplugged and the motor shafts moving, the room stops will need to be reset. Consult the correct manual or TIP sheet for the proper procedure.

! NOTE

Power Gear will not be liable for excessive labor time required to gain access to Power Gear components.

! Warning


12 volt automotive batteries contain sulfuric acid which can cause severe burns. Avoid contact with the skin, eyes and clothing. 12 volt automotive batteries produce hydrogen gas which is explosive; keep cigarettes, open flames and sparks away from the battery at all times.



Read, understand, and follow all instructions in this test before starting.

Test 2: This is to be used when the slide-out room will not operate normally with the touch pad or if the room is already retracted in and the override mode (see owner's manual # 3010002679 for override mode) cannot be performed. If the room will operate with the wall switch or the room is extended and the override mode can be performed, proceed to Test 1 (Document # 82-S0528), available on our website at www.lci1.com.

Motor / Encoder Plug

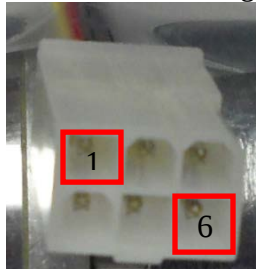

Complete Motor Assembly



Figure 1


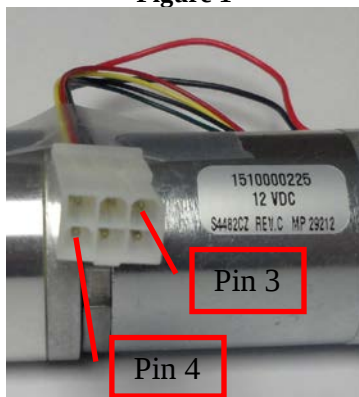


Figure 2

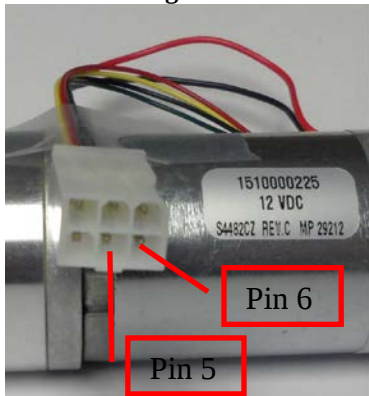

Fault Code: Code 4 on control 1510000199 4 Wire Internal Encoder Testing

Indicates bad or loose connection on motor to control harness, defective motor to control harness, open or shorted slide-out motor, or open or shorted slide-out motor encoder. On the wall switch, the Green LED flashes to identify which motor encoder is in fault (see owner's manual 3010002679).

STEP 1: Removing the Motor/Encoder Assembly from the rail assembly.

NOTE: Depending on the accessibility, it may be necessary to remove the interior motor cover or the exterior motor cover. The motor is located at the top of the in-wall rail.

For questions on supporting the room or accessing the rail assembly, contact the OEM.

STEP 2: Applying 12V DC and Ground to the Motor / Encoder Plug.

Using a fully charged +12V DC battery: Apply 12V DC to the motor/encoder plug pin 4 (red thinner gauge wire).

Apply a good ground to the motor / encoder plug pin 3 (black thinner gauge wire).

See Figure 1. This will provide power to the encoder.

Using a multi-meter, back probe between Pin 4 and Pin 3 at the motor / encoder plug to verify there is 12V DC and Ground going to the encoder. **See Figure 1.**

Apply 12V DC to the motor / encoder connector on the red wire pin 5. Apply a good Ground to the motor / encoder connector on the black wire. This will provide power to the motor and will cause it to operate. **See figure 2**

Caution: The motor shaft will turn when the motor is operating.

! WARNING

Always make sure that the slide out room path is clear of people and objects before and during operation of the slide out room. Always keep away from the slide out rails when the room is being operated. The gear assembly may pinch or catch on loose clothing.

! NOTE

Power Gear will not be liable for excessive labor time required to gain access to Power Gear components.

! Warning

12 volt automotive batteries contain sulfuric acid which can cause severe burns. Avoid contact with the skin, eyes and clothing. 12 volt automotive batteries produce hydrogen gas which is explosive; keep cigarettes, open flames and sparks away from the battery at all times.



STEP 3: Checking for the encoder signal.

Using a multi-meter set on AC Volts, back probe between pin 3 and pin 1 at the Encoder Connector. **See Figure 3** Check for a steady AC voltage reading.

Using a multi-meter set on AC Volts, back probe between pin 3 and pin 2 at the Encoder Connector. **See Figure 4** Check for a steady AC voltage reading.

If there is a steady AC voltage, proceed to **Step 4**.

If there is NOT a steady AC voltage reading, or there is no voltage reading, replace the motor assembly. See the motor label or the rail assembly label for the Power Gear part number for replacement.

Figure 3


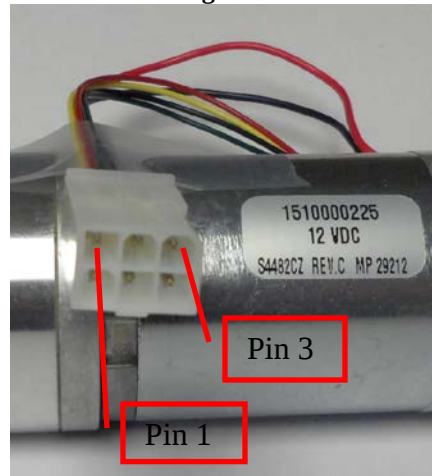


Figure 4

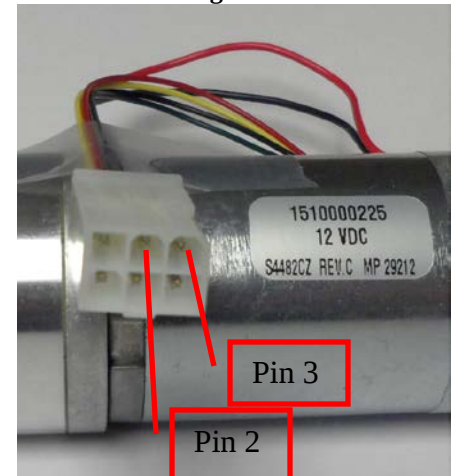

Step 4: If the test in STEP 3 showed a steady AC Voltage at the Encoder Connector, contact Power Gear Technical Serviced at www.lci1.com for further diagnostic before proceeding.

Additional Reference Information located At www.lci1.com.

Document #	Description:
3010002679	Owner's manual slim rack in-wall slide-out system 1510000199
3010002558	Installation and service manual slim rack slide-out 1510000199
82-S0518	Troubleshooting slide-out control box 1510000199 in-wall
82-S0529	Encoder test 1 dual planetary motor sync control 1510000199



This manual is provided courtesy of **RV Tech Cheat Sheet**



Professional resources for the whole RV industry — free.

We put manuals, wiring diagrams and hard-won tech knowledge in every technician's hands, so repairs get done right the first time, techs work faster, and RV owners everywhere get better service.



rvtechcheatsheet.com/manuals

Find thousands more RV manuals, wiring diagrams and parts lists

RV techs: share fixes, ask questions and learn from each other.

Join our free Facebook group →



Follow proper safety practices. If in doubt, consult a professional RV technician.